

AnyWireASLINK System Products Guide

ASLINKSENSOR



BS-K1117□-M□□-3012

Smartclick is a registered trademark of OMRON Corporation.

[Notes on Safety]

Precautions that must be observed in order to use this system safely are indicated as shown below. You must observe these precautions.

WARNING A WARNING indicates a potentially hazardous situation which, if not handled correctly, could result in death or serious injury.

CAUTION A CAUTION indicates a potentially hazardous situation which, if not handled correctly, may result in personal injury or property damage.

WARNING

- System Safety
This system is intended for general industrial applications. It does not have functions for supporting applications requiring higher levels of safety such as safety-related devices or accident prevention systems. The product must not be used for these purposes.
- Always turn off the power before attempting to mount or replace.
- Prolonged continuous flow of a rated load current or higher or a transit current due to load short-circuit, etc., in the hybrid unit including the output unit and the output circuit may result in smoking or firing. An external safety device such as a fuse must be installed.

CAUTION

- System power supply
Use a stable, 24V DC power supply. Use of an unstable power supply may cause problems with the system.
- Separately route high-voltage and power cables
Although the AnyWireASLINK has a high noise margin, keep the transmission lines and I/O cables away from high-voltage and power cables.
- Connectors and terminals
 - Pay careful attention to the cable length and how to fix the cable so as to avoid stress on the connector and connected cable, and prevent removal even if they are stressed.
 - Make sure to prevent any metal objects from getting inside the connectors or the terminal blocks.
 - Short-circuits caused by metal objects or mis-wiring are likely to damage the device.
- Do not impose any external loads on the units. Doing so may cause a failure.
- Do not disconnect or reconnect between the transmission line and slave units. A malfunction may occur.
- Use the AnyWireASLINK within the range of the specifications and conditions shown below.

[Warranty]

■ Warranty period

The warranty on the delivered Product shall continue to be effective for one (1) year after the delivery thereof to a location as designated by the original owner.

■ Scope of warranty

Should a defect occur in any part of the Product during the foregoing warranty period when it is used normally in accordance with the specifications described in this User's Manual, the Company shall replace or repair the defect free of charge, except when it arises as a result of:

- [1] Misuse or abuse of the Product by the owner;
- [2] Fault caused by other than the delivered Product;
- [3] The unauthorized modification or repair of the Product by any person other than the Company's personnel;
- [4] Any unusual force of nature, disaster or other cause beyond the Company's control.

The term "warranty," as used herein, refers to the warranty applicable to the delivered product alone. The Company shall not be liable for consequential or incidental damages resulting from any malfunction.

■ Repair at cost

After the expiration of the warranty period, the owner shall be responsible for all costs and expenses incurred for the troubleshooting and repair of the Product. Even during the warranty term, the Company shall repair any defects arising from causes other than within the scope of the warranty as specified above, at the owner's cost.

[Type]

AnyWireASLINK proximity sensor: Amplifier built-in type, shield type with M12 connector

BS-K1117-M08-3012	M08, nickel plating
BS-K1117-M12-3012	M12, nickel plating
BS-K1117-M18-3012	M18, nickel plating
BS-K1117-M30-3012	M30, nickel plating
BS-K1117S-M12-3012	M12, fluoropolymer resin coating
BS-K1117S-M18-3012	M18, fluoropolymer resin coating
BS-K1117S-M30-3012	M30, fluoropolymer resin coating
BS-K1117M-M12-3012	M12, full stainless body
BS-K1117M-M18-3012	M18, full stainless body
BS-K1117M-M30-3012	M30, full stainless body

[Function]

Model	ASLINK SENSOR 2-wire type (not-insulated)
Detection method	Inductive type
Function	Sensitivity adjustment value (threshold value)
	Hysteresis
	Alarm judgment value
	Alarm judgment time
	Normally open/normally close
	Delay timer
	Slave unit voltage drop
	Sensing level drop


[Items in Package]

BS-K1117-M08-3012	Main body ······ 1
BS-K1117□-M12-3012	Nut ······ 2
BS-K1117□-M18-3012	Toothed lock washer ···· 1
BS-K1117□-M30-3012	


CAUTION Make sure to use the included nut for a sensor of fluoropolymer resin coating specification. If any other nut is fitted, coating function may be impaired.

* Purchase the mounting fixture separately if required.

* "Address writer ARW-04(Ver04-101 or higher) or ARW-03(Ver2.10 or higher)" is required for setting to the main body. Prepare it together.

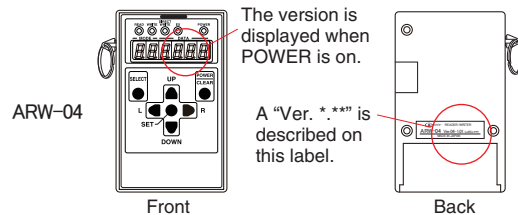

[Name of each part]

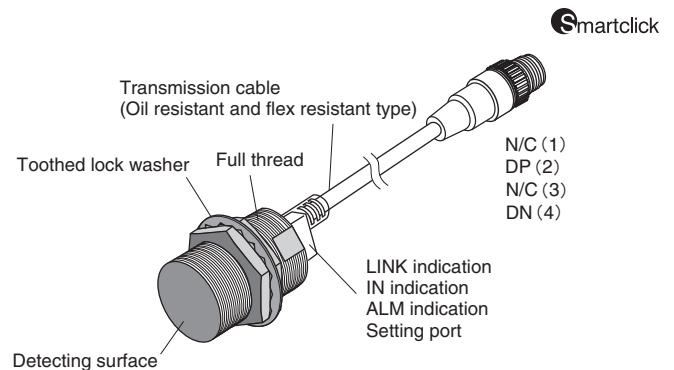

Example of BS-K1117M-M18-3012

[How to connect AnyWireASLINK]

The AnyWireASLINK can employ a two-wire or four-wire terminal selectively depending on the load current.

This Products Guide describes a two-wire (non-insulated) terminal.


If the load current is small, using a two-wire (non-insulated) terminal allows for achieving simplified wiring without local power supply.

In the case of prioritizing the sites of concentrated loads and/or the number of connections, hybridization with a four-wire (isolated) terminal, which supports local power supply, is also possible. Make sure to use a four-wire (isolated) terminal in the case of input and load driving using an external power supply.

In the case of hybridization, refer to the Four-Wire (Isolated) Terminal Products Guide separately.

[Connection example]

■ Connection with 2-wire type (not-insulated) terminal only

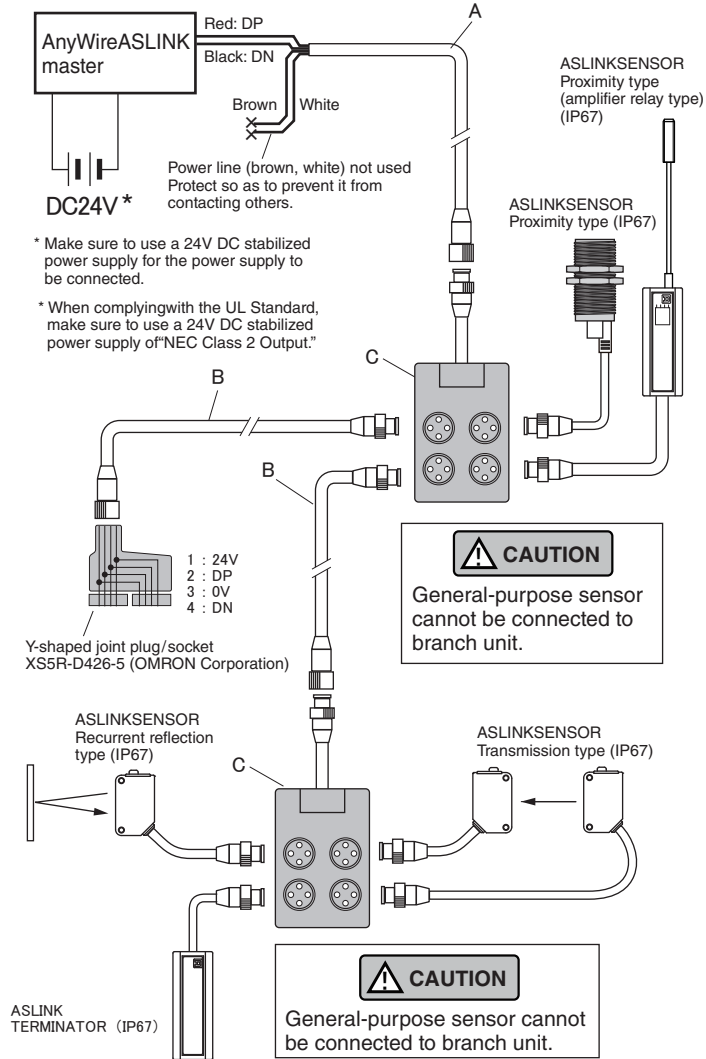

A Waterproof trunk cable (1.25mm²)

Model	Description
BL2-0C1S-3K	One end discrete wire, straight M12 3m

B Waterproof trunk cable (1.25mm²)

Model	Description
BL2-1S1P-3K	Both end straight M12 3.0m
BL2-1S1P-5K	Both end straight M12 5.0m
BL2-1S1P-10K	Both end straight M12 10m

C Waterproof branch unit


Model	Description
BL2109-04-22	4 ports
BL2109-08-22	8 ports

■ Relationship between the size and length of the transmission line and the supply current (Table 1)

Size of the transmission line (DP, DN)	Supply current on the transmission line (DP, DN)		
	Total length 50m or less	Total length: Over 50m, no longer than 100m	Total length: Over 100m, no longer than 200m
1.25mm ²	MAX 2A	MAX 1A	MAX 0.5A
0.75mm ²	MAX 1.2A	MAX 0.6A	MAX 0.3A
0.5mm ²	MAX 0.8A	MAX 0.4A	MAX 0.2A

- CAUTION**
- Refer to Table 1 so that the size and length of the transmission line and the allowable supply current lie within an appropriate range.
 - Connect the same symbols (DP, DN) correctly between the AnyWireASLINK master and each device.
 - The branching length or branch number has no limitation.
 - Include the length of the cable provided with the terminal in the "total line length."
 - Connect the terminator "BT0 (polar)" to the terminal on the transmission line farthest from the AnyWireASLINK master.

■ Example of mixture of 2-wire type (not-insulated) and 4-wire type (insulated) terminals

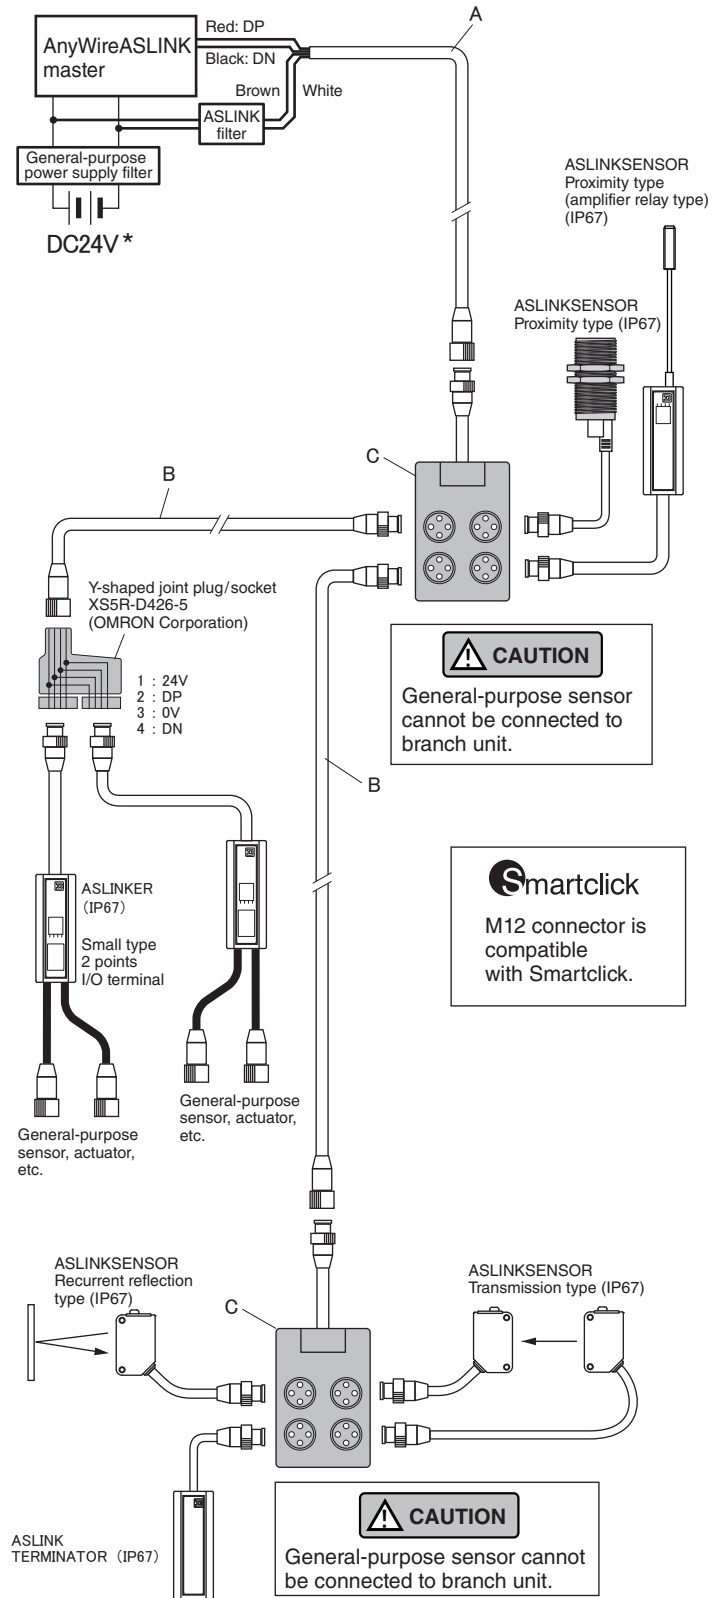

A Waterproof trunk cable (1.25mm²)

Model	Description
BL2-0C1S-3K	One end discrete wire, straight M12 3m

B Waterproof trunk cable (1.25mm²)

Model	Description
BL2-1S1P-3K	Both end straight M12 3.0m
BL2-1S1P-5K	Both end straight M12 5.0m
BL2-1S1P-10K	Both end straight M12 10m

C Waterproof branch unit

Model	Description
BL2109-04-22	4 ports
BL2109-08-22	8 ports

- CAUTION**
- In the case of connection to a load (e.g. input/output port) controlled by a different power supply than that used in the AnyWireASLINK, make sure to use a four-wire (isolated) terminal. Otherwise, a malfunction may occur.

[Notes on Combined Use with 4-wire Type (Insulated) Terminal]

If any of the side-by-side lines of DP, DN, 24V and 0V exceeds the total length of 50m in a power supply system to be supplied, serially connect the "ASLINK filter [Type ANF-01]" or "filter of COSEL Co., Ltd. [Type EAC-06-472]" to 24V and 0V in the starting position of the side-by-side lines.

This will improve noise resistance, reduce the impact of crosstalk by transmission signals and stabilize the signals.

In any case of power supply to the entire system from the master driving power supply or power supply from the local power supply, insert a filter.

Insert the "ASLINK filter [Type ANF-01]" regardless of installation method and distance when complying with CE Standard.


■ Filter allowable power current

Model	Type	Allowable power current
ASLINK filter	ANF-01	MAX 5A/24V DC
Filter of COSEL Co., Ltd.	EAC-06-472	MAX 6A/24V DC


■ AnyWire Type: ANF-01 Connection example

(The following is the explanatory connection diagram. Actual terminal arrangement should meet each device.)

① Power supply to the entire system -----

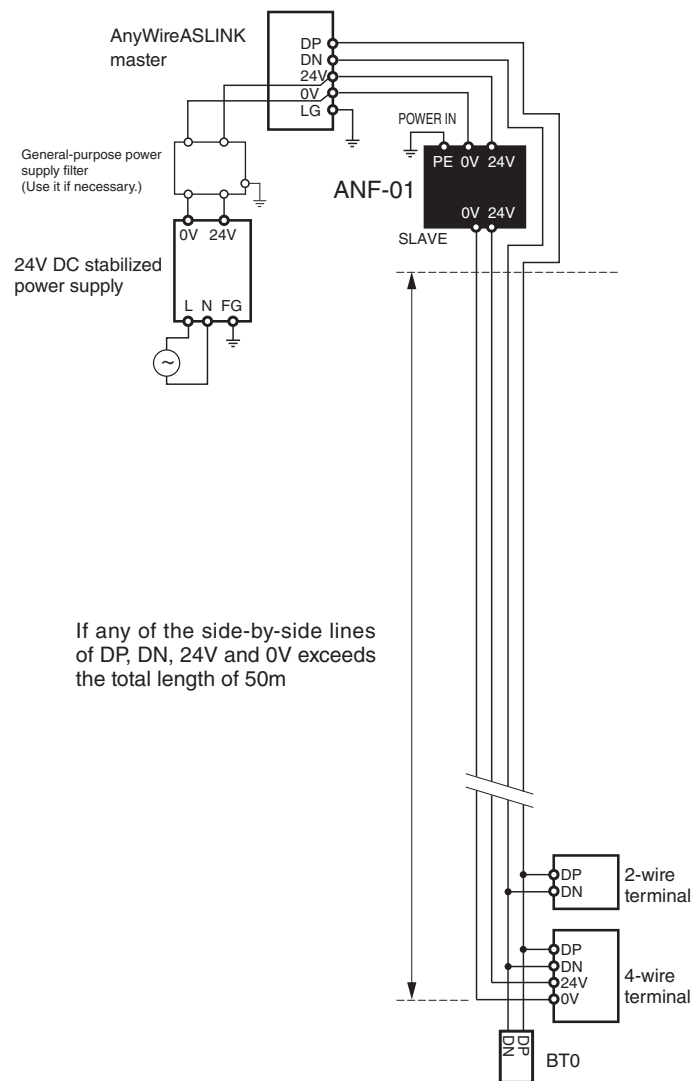


② Local power supply/branching -----

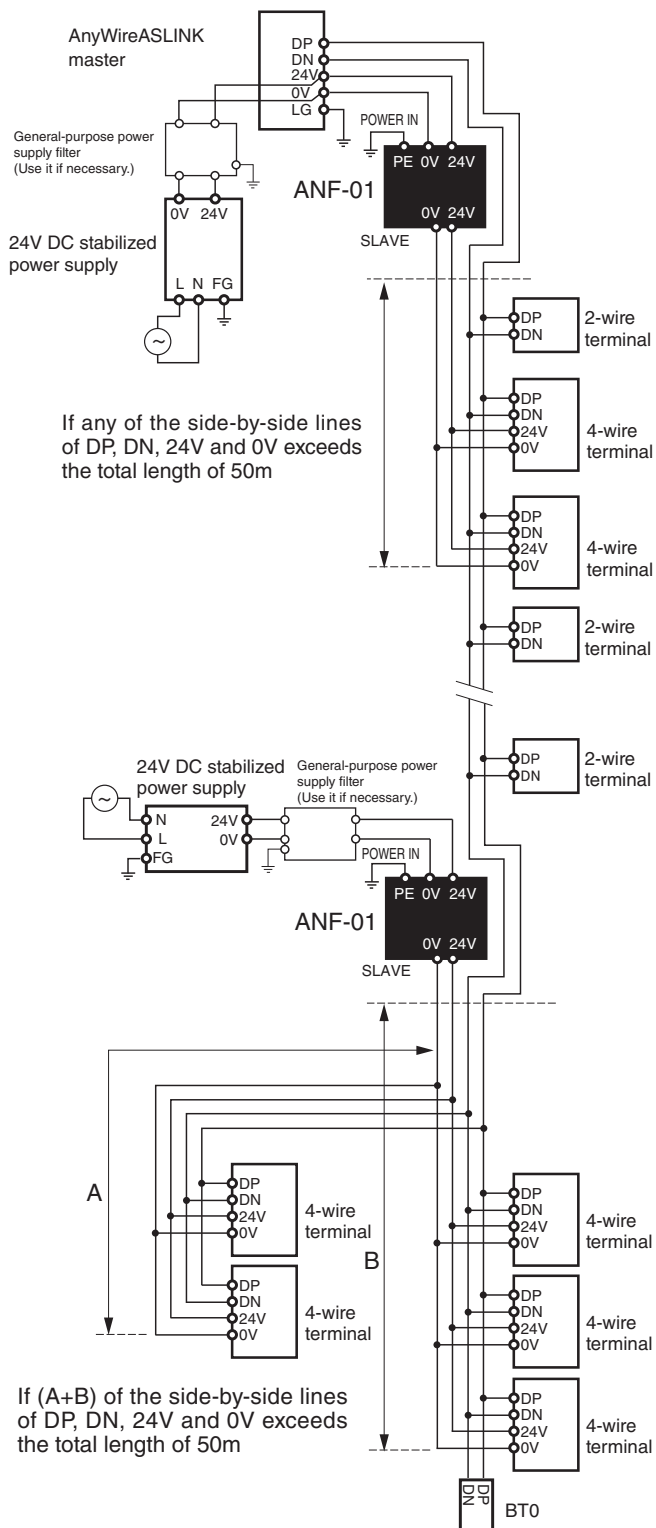


■ COSEL Co., Ltd. Type: EAC-06-472 Connection example

(The following is the explanatory connection diagram. Actual terminal arrangement should meet each device.)

① Power supply to the entire system

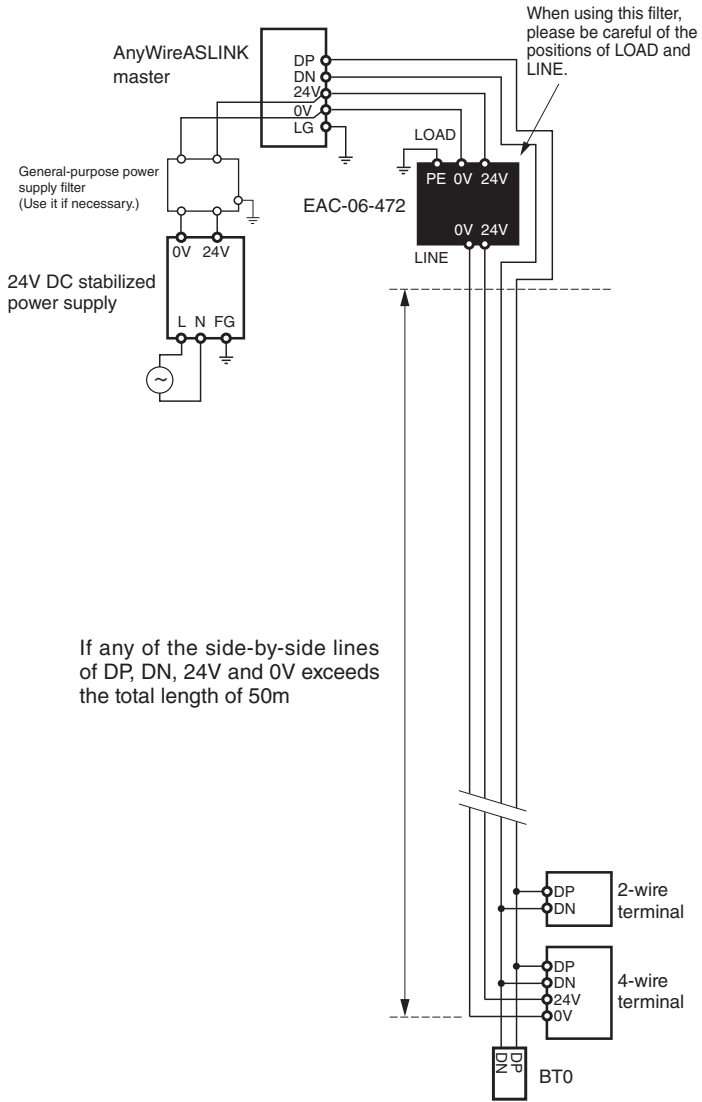


② Local power supply/branching

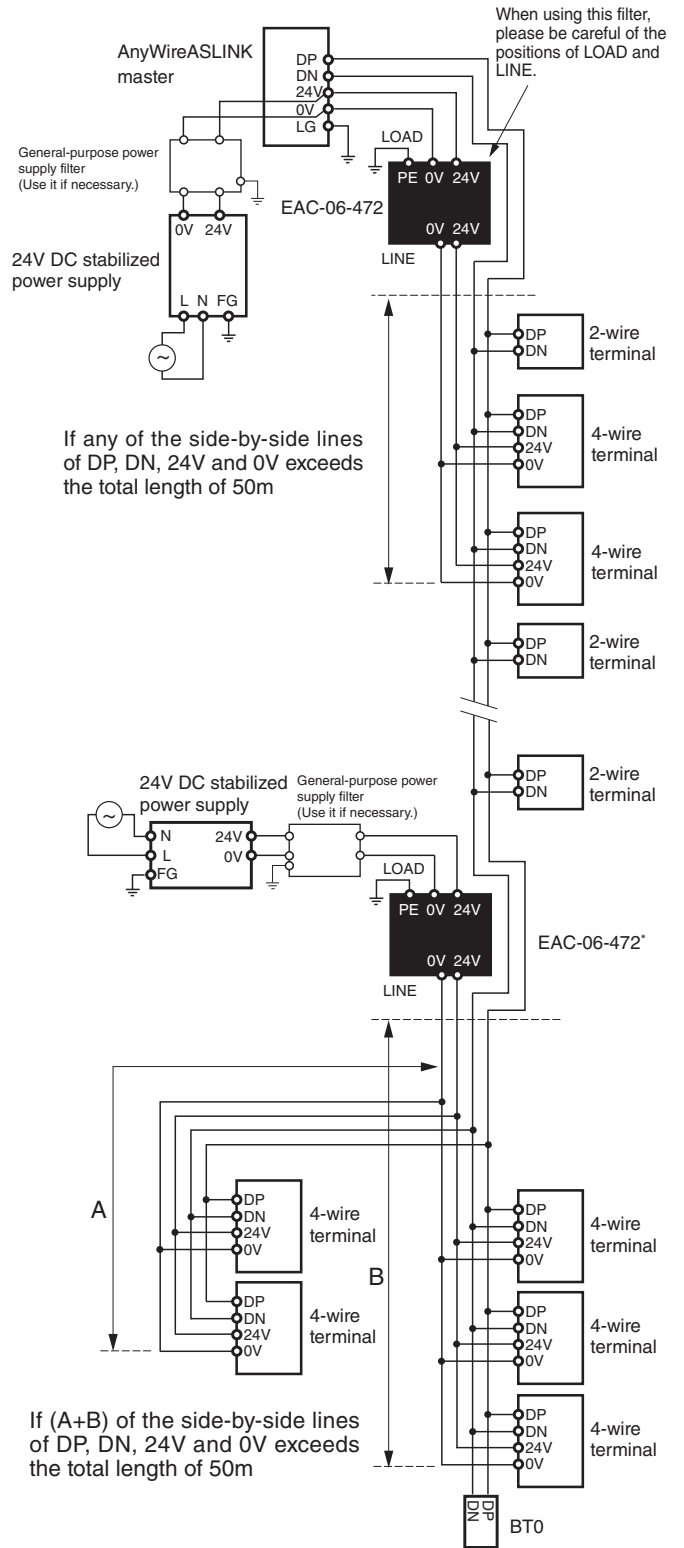


[About connection]

Connect with the AnyWireASLINK transmission line (DP, DN).

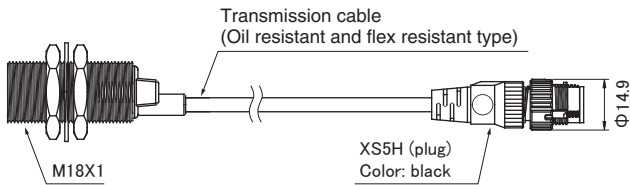

Example of BM-K1117G-M18-3012


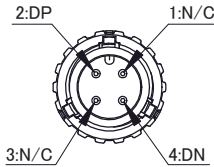


[Installation example]

When setting is expected to be changed again, install so that the setting port can be observed.

<BS-K1117-M08-3012>



- Installation hole diameter



Use a toothed lock washer when locking.
Tightening torque: 9 N·m

<BS-K1117-M12-3012>



- Installation hole diameter



Use a toothed lock washer when locking.
Tightening torque: 30 N·m

<BS-K1117-M18-3012>



- Installation hole diameter



Use a toothed lock washer when locking.
Tightening torque: 70 N·m

<BS-K1117-M30-3012>

- Installation hole diameter

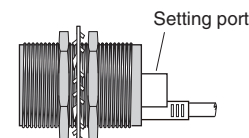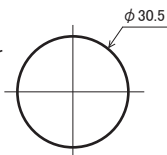

Use a toothed lock washer when locking.
Tightening torque: 180 N·m



When fixing the main body, leave room for a margin so as not to stress the cable and connecting connector.
Do not tighten screws excessively. Failure may result.

[Installation location]

- Location where the unit is not subject to vibration or shock
- Location where humidity is not condensed
- Location where the atmosphere is free of corrosive gas, flammable gas and sulfur
- Location where the unit is removed from high-voltage or high-current cables
- Location where the unit is removed from cables and controllers that generate servo, inverter or other high-frequency noise.
- Location not exposed to direct sunlight

[Precaution for use]

- This unit is used by connecting with the AnyWireASLINK transmission line. This unit does not operate even if this is directly connected to the I/O card of sequencer, etc.
- Use this unit within a proper voltage range.
- Also include the transmission line attached to the main body in the total length.

[Various settings]


■ Items

Address number setting Teaching Parameter setting

■ Common procedure for address writer operation


To use the address writer, make sure to connect it to the AnyWireASLINK master unit.
Address writer ARW-04(Ver04-101 or higher) or ARW-03 (Ver2.10 or higher) is required for operation.
For detailed operation procedures, refer to the product guide of the address writer.

1. Connect the AnyWireASLINK slave to the AnyWireASLINK master unit. Make settings with the address writer, while transmission signals (DP, DN) are being supplied.

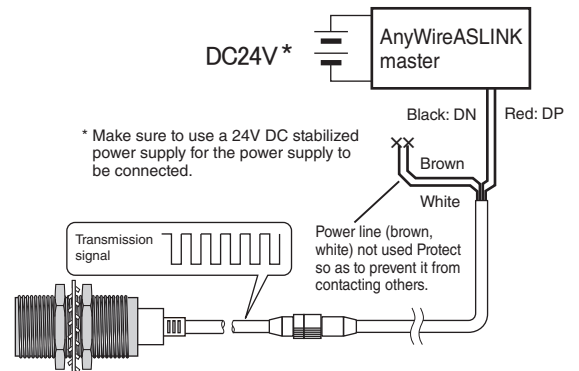

2. Setting is required for all AnyWireASLINK devices.

Direct the address writer to the setting port (Fig.1) of the main body.
Bring the light emitting/receiving part as close to the setting port as possible.

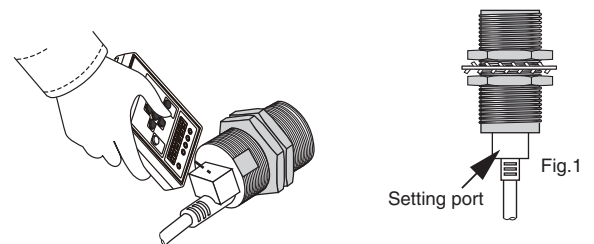


- * When setting is changed in [WRITE] mode, the setting is reflected after the system is started up again.
When setting is changed in [DIRECT WRITE] mode, the setting is reflected at a time when writing is completed.

- * If this equipment is arranged in parallel, use the remote head (ARW-RH) together to prevent writing into an unintended terminal.

Address number setting

An address number indicates an allocation starting number in the transmission frame written in the terminal.
Set an address number between "0~254."



The factory setting of the terminal is "255," which means no setting.
When the address number is set at 255, the terminal does not perform an input/output operation.
Make sure to set an address number between "0~254" prior to use.


Teaching

Memorize a state with work/without work in ASLINKSENSOR.

Make settings with work which is actually used.
When setting, separate by 50% or more of the maximum detection distance.


[SET ON setting]

Make settings with metal detected present.

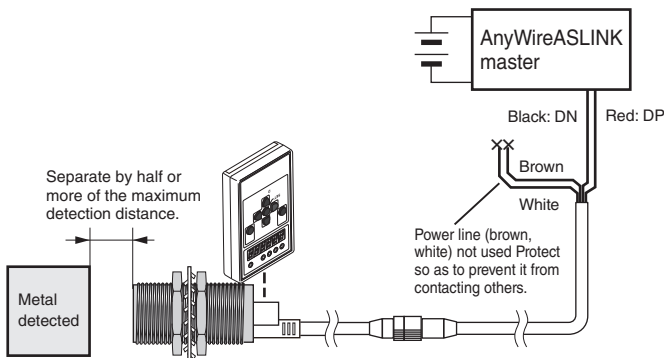

[SET OFF setting]

Make settings with metal detected absent.

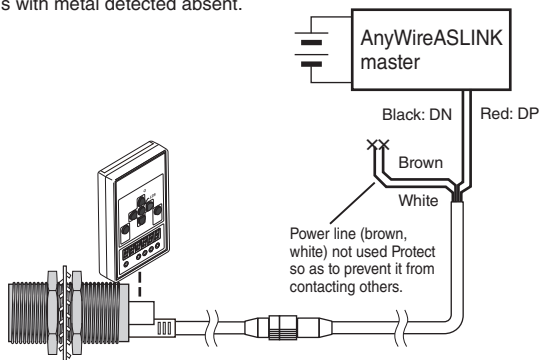

Parameter setting

Setting of threshold value

Set threshold value of sensing level to judge detected/not detected.
* Difference in detecting state memorized in teaching is determined to be 100%.

• Address writer (ARW-04, ARW-03): Parameter 01

Variable	Unit
0 - 100	%

Default: BS-K1117-M08-3012 : 11
BS-K1117□-M12-3012 : 6 BS-K1117M-M12-3012 : 10
BS-K1117□-M18-3012 : 10 BS-K1117M-M18-3012 : 11
BS-K1117□-M30-3012 : 12 BS-K1117M-M30-3012 : 15

Setting of hysteresis

Set sensing change amount necessary to turn detecting state ON to OFF from turning detecting state OFF to ON.

• Address writer (ARW-04, ARW-03): Parameter 02

Variable	Unit
0 - 100	%

Default: 5

Setting of alarm value Hi

Set upper limit value of alarm judgment value.

• Address writer (ARW-04, ARW-03): Parameter 03

Variable	Unit
0 - 100	%

Default: 80

* Set alarm value such that Hi>Lo.

Setting of alarm value Lo

Set lower limit value of alarm judgment value.

• Address writer (ARW-04, ARW-03): Parameter 04

Variable	Unit
0 - 100	%

Default: BS-K1117-M08-3012 : 12

BS-K1117□-M12-3012 : 7 BS-K1117M-M12-3012 : 11

BS-K1117□-M18-3012 : 11 BS-K1117M-M18-3012 : 12

BS-K1117□-M30-3012 : 13 BS-K1117M-M30-3012 : 16

* Set alarm value such that Hi>Lo.

Setting of alarm value monitoring time

Set monitoring time of alarm judgment value.

• Address writer (ARW-04, ARW-03): Parameter 05

Variable	Unit
3 - 255	%

Default: 50

Setting of normally open/normally close

Set normally open/normally close.

• Address writer (ARW-04, ARW-03): Parameter 06

Variable	Description
0	Normally open ON with work
1	Normally close OFF without work

Default: 0

Setting of operation mode change

Set presence/absence of alarm diagnosis function.

• Address writer (ARW-04, ARW-03): Parameter 07

Variable	Description
0	Simple mode Alarm diagnosis function is disabled.
1	Normal mode Alarm diagnosis function is enabled.

Default: 0

Setting of delay timer ON/OFF

Set ON delay timer/OFF delay timer.

• Address writer (ARW-04, ARW-03): Parameter 10

Variable	Description
0	No delay timer Delay timer is disabled.
1	ON delay timer ON delay timer is enabled.
2	OFF delay timer OFF delay timer is enabled.
3	ON/OFF delay timer ON/OFF delay timer is enabled.

Default: 0

Setting of delay timer value

If delay timer is set with parameter 10, delay time can be set.

• Address writer (ARW-04, ARW-03): Parameter 11

Variable	Unit
0 - 255	10ms











Default: 0




Parameters [08, 09, 12 to 19] are items related to internal setting. Do not set them.

[Monitor Display]

Operating state of the main body is displayed by LED.

Normal state: LINK flashing, ALM unlit, IN ON lit/OFF unlit		
Name	Indication status	Description
LINK (Green)	Lit 	Transmission signal error
	Flashing 	Transmission signal is normally supplied.
	Unlit 	No transmission signal
ALM (Red)	Lit 	Sensing level drop*
	Flashing 	Slave unit voltage drop
	Unlit 	Normal
LINK ALM	Alternate flashing LINK  ALM 	When master unit detects duplication of ID (address) of this unit or non-setting
IN (Orange)	Lit 	ON
	Unlit 	OFF

* Only when alarm diagnosis function is enabled.

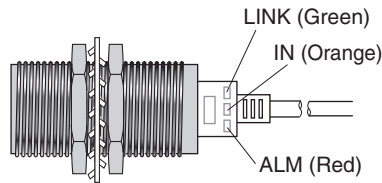

[Troubleshooting]

When the LED on the main body displays as follows, take measures as shown below.

LINK	IN	ALM	Cause	Measures
○ Unlit	○ Unlit	○ Unlit	<ul style="list-style-type: none"> ASLINKSENSOR is not connected to the AnyWireASLINK system. Power supply for the AnyWireASLINK system itself is not turned on. 	<ul style="list-style-type: none"> Confirm that there is no disconnection between the ASLINKSENSOR and the AnyWireASLINK system, and recover the connection. Confirm the power status of the AnyWireASLINK system, and turn on the power.
● Lit	○ Unlit	○ Unlit	<ul style="list-style-type: none"> Directly connected to 24-V power supply. 	<ul style="list-style-type: none"> Reconnect anew to AnyWireASLINK system
◎ Flashing (0.5s alternate)	○ Unlit	◎ Flashing (0.5s alternate)	<ul style="list-style-type: none"> ASLINKSENSOR remains at address 255 (factory setting). ASLINKSENSOR has a duplicate address number with another unit. 	<ul style="list-style-type: none"> Set address other than 255. Look for any other unit which has the same error indication, and set any address number different from it.
—	—	◎ Flashing (0.2s lit, 1.0s unlit)	<ul style="list-style-type: none"> Transmission signal level lowering is being sensed. 	<ul style="list-style-type: none"> Decrease the number of units connected to the same AnyWireASLINK system. Shorten the transmission line between the ASLINKSENSOR and the master unit.
◎ Flashing	—	● Lit	<ul style="list-style-type: none"> Sensing level lowers. 	<ul style="list-style-type: none"> Confirm state of ASLINKSENSOR, and adjust the position and clean the detecting surface.

When the following errors are indicated by the address writer, take measures as shown below.

Indication	Cause	Measures
[E-0303]	The set parameter is invalid.	Confirm the parameter and set a correct parameter.

Take the following measures in the following cases.

Symptom	Measures
Cannot detect.	<ul style="list-style-type: none"> Is the metal detected in the proper position? → Make adjustment so that the metal detected is within the proper range from the ASLINKSENSOR detecting surface. Is the wiring correct? → Confirm that the ASLINKSENSOR transmission wire is connected correctly to the ASLINKSENSOR transmission line (DP, DN). Is a power supply of proper capacity supplied to the AnyWireASLINK master unit and slave unit? Was teaching performed? → Set teaching with work actually detected. Is this used within the rated detecting range? → Use within the rated range.
Cannot set with address writer.	<ul style="list-style-type: none"> Is the wiring correct? → Re-confirm connection of ASLINKSENSOR transmission wire. Is power supplied to the AnyWireASLINK system? → Confirm the power supply. Is the set parameter correct? → Confirm the parameter and set a correct parameter.

[Parameter and item]

■BS-K1117-M□□-3012・BS-K1117S-M□□-3012

Parameter	Variable	Description	Variable at factory setting
[01] Threshold value	0-100%	Set threshold value of sensing level to judge detected/not detected.	M08 : 11 M12 : 6 M18 : 10 M30 : 12
[02] Hysteresis	0-100%	Set sensing change amount necessary to turn detecting state ON to OFF.	5
[03] Alarm value Hi	0-100%	Set upper limit value of alarm judgment value.	80
[04] Alarm value Lo	0-100%	Set lower limit value of alarm judgment value.	M08 : 12 M12 : 7 M18 : 11 M30 : 13
[05] Alarm value Monitoring time	3-255	Set monitoring time of alarm judgment value. (1=100ms)	50
[06] Normally open/ Normally close	0	Normally open	0
	1	Normally close	
[07] Operation mode	0	Simple mode	0
	1	Normal mode	
[10] Delay timer ON/OFF	0	Delay timer is disabled.	0
	1	ON delay timer	
	2	OFF delay timer	
	3	ON/OFF delay timer	
[11] Delay timer value	0-255	Set delay time. (1=10ms)	0

■BS-K1117M-M□□-3012

Parameter	Variable	Description	Variable at factory setting
[01] Threshold value	0-100%	Set threshold value of sensing level to judge detected/not detected.	M12 : 10 M18 : 11 M30 : 15
[02] Hysteresis	0-100%	Set sensing change amount necessary to turn detecting state ON to OFF.	5
[03] Alarm value Hi	0-100%	Set upper limit value of alarm judgment value.	80
[04] Alarm value Lo	0-100%	Set lower limit value of alarm judgment value.	M12 : 11 M18 : 12 M30 : 16
[05] Alarm value Monitoring time	3-255	Set monitoring time of alarm judgment value. (1=100ms)	50
[06] Normally open/ Normally close	0	Normally open	0
	1	Normally close	
[07] Operation mode	0	Simple mode	0
	1	Normal mode	
[10] Delay timer ON/OFF	0	Delay timer is disabled.	0
	1	ON delay timer	
	2	OFF delay timer	
	3	ON/OFF delay timer	
[11] Delay timer value	0-255	Set delay time. (1=10ms)	0

[Specifications]

■ General Specifications

Operating ambient temperature/humidity	-10~60°C, 10~90%RH (No condensation)
Storage ambient temperature/humidity	-25~75°C, 10~90%RH (No condensation)
Operating atmosphere	No corrosive gas
Altitude for use *1	0~2000m
Degree of contamination *2	2 or less

*1 AnyWireASLINK apparatus must not be stored or used under an environment pressurized higher than that of the atmospheric pressure at an altitude 0m. A malfunction will occur.

*2 This is an indicator to show the degree of occurrence of a conductive substance in an environment where the device is used.
At the degree of contamination 2, only non-conductive contamination occurs.
However, temporary conductivity may occur due to environment setting.

■ Transmission specification

Operating power supply voltage	Voltage DC24[V]+15~-10%(21.6~27.6[V] DC) with a ripple 0.5[V]p-p max.
Transmission method	Full-duplex total frame/cyclic method
Synchronization method	Frame/bit synchronization method
Transmission procedure	Dedicated protocol
Connection mode	Bus type (Multi-drop method, T-branch method, Star, Tree branch method)
Number of connection points	Up to 512 points (IN 256 points + OUT 256 points)
Number of connection units	Up to 128 units
RAS function	Transmission wire disconnection sensing, transmission wire short-circuit sensing, transmission power decrease sensing, ID duplication, ID non-setting sensing

■ Individual specification

■ BS-K1117-M□□-3012

Number of occupying points	Input 1 point	
Consumption current	Received and supplied from the AnyWireASLINK transmission signal (DP, DN).	
	M08: 13.8mA	M12: 8.4mA
	M18: 8.0mA	M30: 8.2mA
Detection method	Electromagnetic induction detection	
With/without shield	Shield type	
Detection target	Magnetic metal	
Standard detected object	M08: Iron 8x8x1mm	M12: Iron 12x12x1mm
	M18: Iron 18x18x1mm	M30: Iron 30x30x1mm
Detection distance (at ambient temperature 23°C)	M08: 1mm (max.)	M12: 2mm (max.)
	M18: 5mm (max.)	M30: 10mm (max.)
Stable detection distance (within operating ambient temperature range)	M08: 0~0.8mm	M12: 0~1.6mm
	M18: 0~4.5mm	M30: 0~9mm
Differential	Depending on parameter setting	
Response time *3	Maximum 10ms	
Influence of temperature (within operating ambient temperature range)	Use detection distance at 23°C as a standard.	
	M08: within ±20%	M12: within ±20%
	M18: within ±10%	M30: within ±10%
Influence of voltage	Within ±1% of detection distance in a range of the AnyWireASLINK master supply power voltage 27.6 to 21.6V	
Protective structure	IP67	
Mass (main body, cable)	M08: Approx. 21g	M12: Approx. 31g
	M18: Approx. 44g	M30: Approx. 107g
Mass (nut, washer)	M08: Approx. 6g	M12: Approx. 8g
	M18: Approx. 19g	M30: Approx. 41g

*3 The time from detection of ON or OFF to sending of a transmission signal.
This time + 2 transmission cycle times is the transmission delay time.

■ BS-K1117S-M□□-3012

Number of occupying points	Input 1 point	
Consumption current	Received and supplied from the AnyWireASLINK transmission signal (DP, DN).	
	M12: 8.4mA	M18: 8.0mA
	M30: 8.2mA	
Detection method	Electromagnetic induction detection	
With/without shield	Shield type	
Detection target	Magnetic metal	
Standard detected object	M12: Iron 12x12x1mm	M18: Iron 18x18x1mm
	M30: Iron 30x30x1mm	
Detection distance (at ambient temperature 23°C)	M12: 2mm (max.)	M18: 5mm (max.)
	M30: 10mm (max.)	
Stable detection distance (within operating ambient temperature range)	M12: 0~1.6mm	M18: 0~4.5mm
	M30: 0~9mm	
Differential	Depending on parameter setting	
Response time *3	Maximum 10ms	
Influence of temperature (within operating ambient temperature range)	Use detection distance at 23°C as a standard.	
	M12: within ±20%	M18: within ±10%
	M30: within ±10%	
Influence of voltage	Within ±1% of detection distance in a range of the AnyWireASLINK master supply power voltage 27.6 to 21.6V	
Protective structure	IP67	
Mass (main body, cable)	M12: Approx. 31g	M18: Approx. 44g
	M30: Approx. 107g	
Mass (nut, washer)	M12: Approx. 8g	M18: Approx. 19g
	M30: Approx. 41g	


■ BS-K1117M-M□□-3012

Number of occupying points	Input 1 point	
Consumption current	Received and supplied from the AnyWireASLINK transmission signal (DP, DN).	
	4.7mA	
Detection method	Electromagnetic induction detection	
With/without shield	Shield type	
Detection target	Magnetic metal	
Standard detected object	M12: Iron 12x12x1mm	M18: Iron 30x30x1mm
	M30: Iron 54x54x1mm	
Detection distance (at ambient temperature 23°C)	M12: 1.6mm (max.)	M18: 3.8mm (max.)
	M30: 8.0mm (max.)	
Stable detection distance (within operating ambient temperature range)	M12: 0~1.3mm	M18: 0~3.2mm
	M30: 0~6.4mm	
Differential	Depending on parameter setting	
Response time *3	Maximum 10ms	
Influence of temperature (within operating ambient temperature range)	Use detection distance at 23°C as a standard.	
	M12: within ±20%	M18: within ±10%
	M30: within ±10%	
Influence of voltage	Within ±1% of detection distance in a range of the AnyWireASLINK master supply power voltage 27.6 to 21.6V	
Protective structure	IP67	
Mass (main body, cable)	M12: Approx. 32g	M18: Approx. 47g
	M30: Approx. 107g	
Mass (nut, washer)	M12: Approx. 8g	M18: Approx. 18g
	M30: Approx. 38g	


[Outside Dimensions]

Unit: mm


BS-K1117-M08-3012

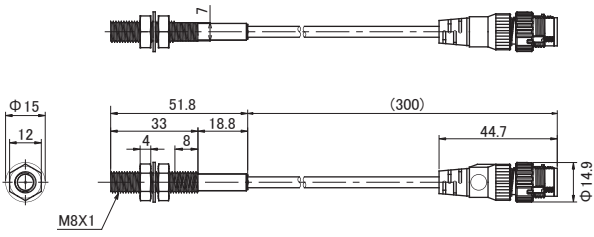


BS-K1117□-M12-3012

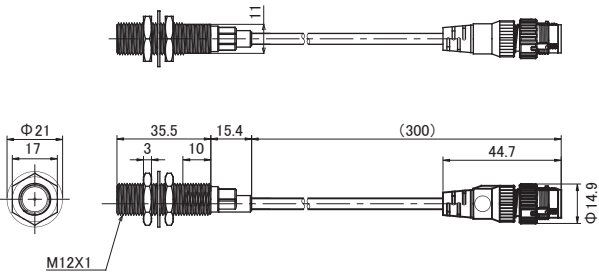


BS-K1117□-M18-3012

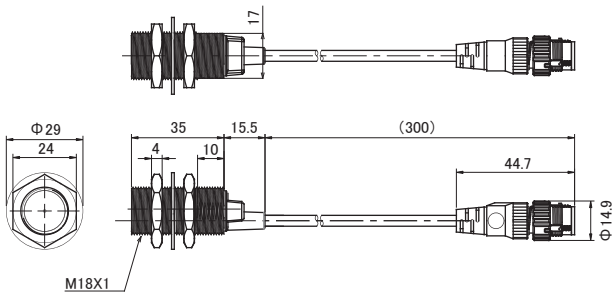


BS-K1117□-M30-3012

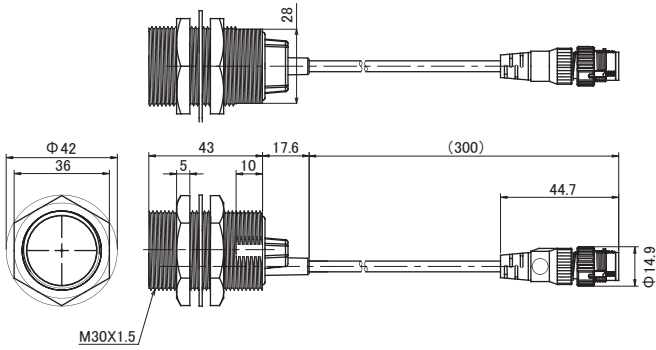



BS-K1117M-M12-3012

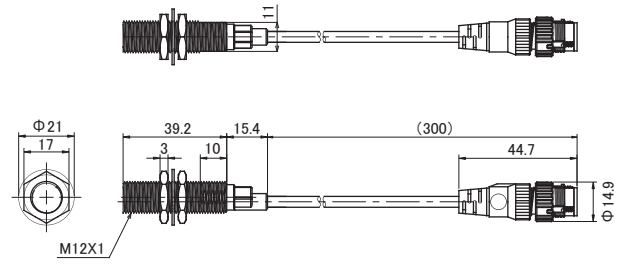

BS-K1117M-M18-3012

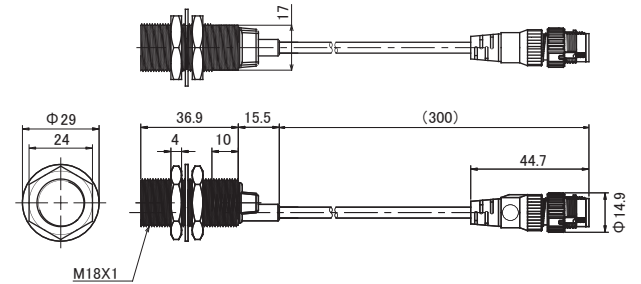

BS-K1117M-M30-3012

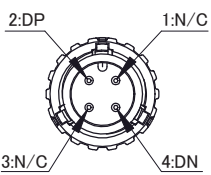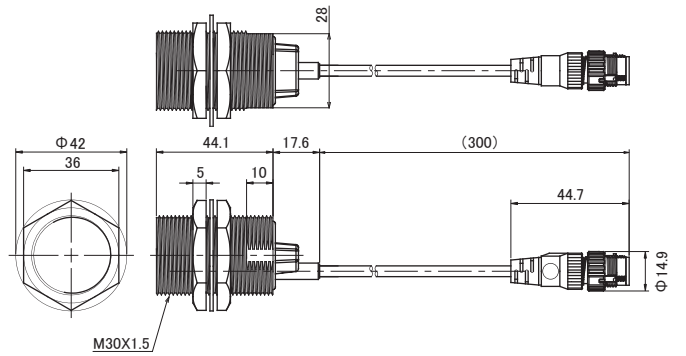

Pin layout in connector is common to all.

[Directive on Waste Electrical and Electronic Equipment (WEEE)]



Note: This symbol mark is for EU countries only.
This symbol mark is according to the directive 2012/19/ EU Article 14 Information for users and Annex IX.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

【中国版RoHS指令】

的产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 [Cr(VI)]	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
安装基板	×	○	○	○	○	○
框架	○	○	○	○	○	○

本表格依据SJ/T11364的规定编制。
○：表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定的限量要求以下。
×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求。



基于中国标准法的参考规格：GB/T11599.2

[Address]

Anywire Anywire Corporation

Headquarters :1 Babazusho, Nagaokakyo-shi, Kyoto 617-8550 JAPAN

Contact :Contact by mail info_e@anywire.jp
:Contact by website http://www.anywire.jp

Printed in Japan 2016,2017,2023 UMA-14534E-EN_a